avanat

DESIGNER SERIE

GUIDE ADJUSTMENT

Spring mechanism

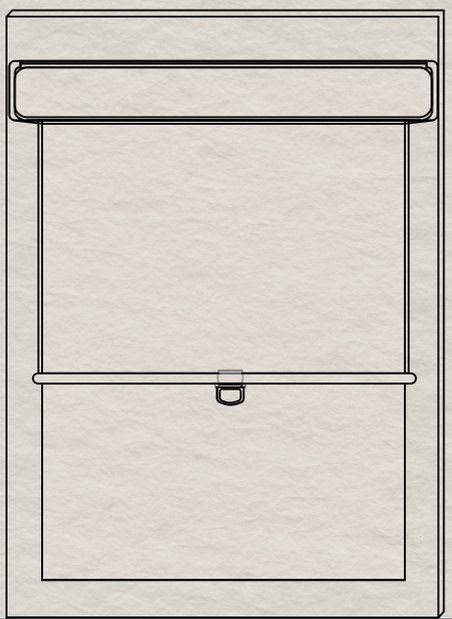

01. ADJUST THE STOP HEIGHT

To adjust the stop height of the fabric, use a flat screwdriver on the cap located on the right side of the fabric.

Clockwise (C): the fabric goes down.
Counterclockwise (G): the fabric goes up.

Adjust gradually until you reach the desired stop height.

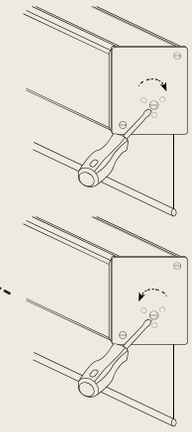

02. ADJUST THE TENSION

On the left side **of the cassette,** make a clockwise rotation to **increase the tension** and speed up the fabric.

Again on the left side, make a **counterclockwise rotation to reduce the tension** and decrease the speed.

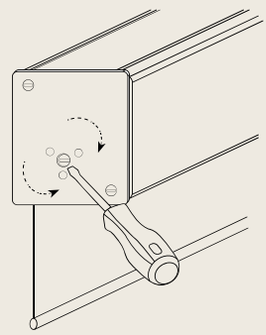

03. INSTALL THE HANDLEN

Slide the small handle onto the bottom rail of the shade until it is securely in place.



Adjust the canvas to the desired height.
Pull down to lower and release to raise.

