avanat

DESIGNER SERIE

PROGRAMMING GUIDE

Motorized Shades

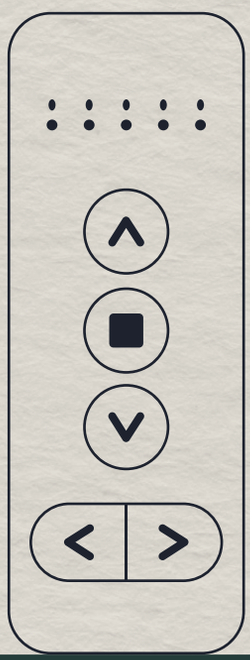

01. ACTIVATE THE MOTOR

Locate the **push button** located on the motor.

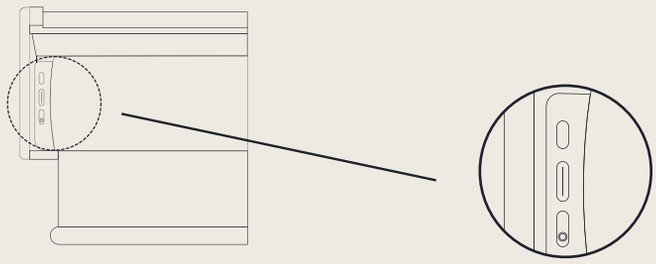

Using a pen or a fine tool, **press and hold the button** for **1 second**.

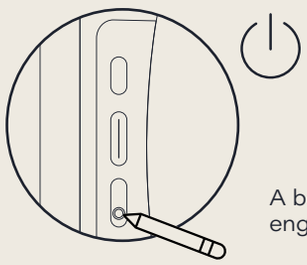

A beep confirms the engine has started.

The blind does not need to stay plugged in all the time. Once charged, it can hold its charge for up to **6 months**.

02. TURN OFF THE ENGINE

Hold down the push button for **7 seconds**. The motor makes a short back-and-forth movement.

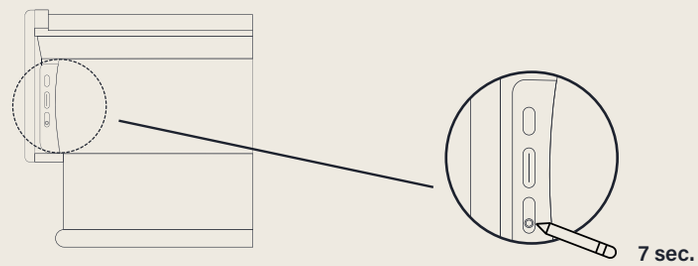

A long beep sounds, then the power is cut off.



When the engine is off, it no longer receives commands from the remote control.

03. PAIR THE REMOTE CONTROL WITH THE ENGINE

1. Select the desired channel using the arrows **PREVIOUS / NEXT**.
2. Channel **1** is selected by default.
3. Hold the motor push button for **1 second.**
4. A pulse indicates that the motor is in programming mode.
5. Within **10 seconds**, press **UP** on the chosen channel on the remote control.
6. A new pulse confirms that the pairing is complete.

Note: In case of an error during channel programming, the engine must be reset. (Step 7)

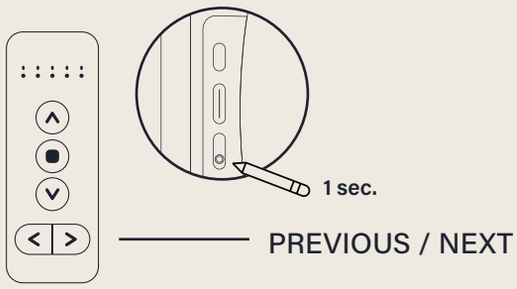

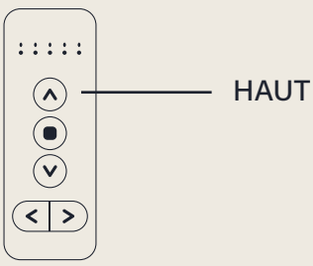

For multiple blinds : determine in advance which blind should be associated with each channel. To avoid interference, program only one motor at a time. However, multiple motors can be associated with the same channel to allow simultaneous control.

04. REVERSE THE DIRECTION OF MOVEMENT

To be used only when the UP and DOWN buttons **UP and DOWN** control the blind in the wrong direction.

1. Hold **STOP** for **5 seconds**.
2. The engine performs a pulse.
3. Within **10 seconds**, press **DOWN**.
4. A pulse confirms the direction reversal.

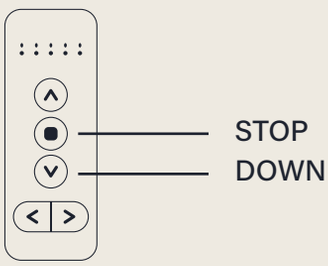

05. PROGRAM THE LIMITS OF THE BLIND

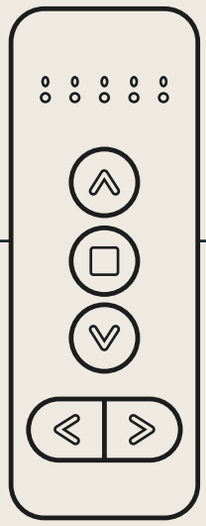

Lower limit | blind closed

1. Hold the back button on the remote control **1 s**.
2. The motor confirms entry into programming mode.
3. Lower the blind with **DOWN** to the desired position.
4. Press the back button again **1 s**.
5. A beep confirms the registration.
6. Press the down arrow for 1s.
7. Press the back button again **1 s**.
8. A beep confirms the registration.

Upper limit | blind open

1. From the lower position, raise with **UP** to the desired position.
2. Press the back button **1 s**.
3. Press the **UP** arrow.
4. Press the back button again **1 s**.
5. A beep confirms the registration.

Note: In case of an error during channel programming, the engine will need to be reset. (Step 7)

06. SAVE INTERMEDIATE POSITIONS

Up to 6 positions can be saved.

1. From the upper limit, move down to the desired position.
2. Hold the back button on the remote control **1 s**.
3. The motor makes a pulse.
4. Press the same button again **1 s** to confirm.
5. Repeat for each additional position.

07. RESET THE ENGINE

Warning : this operation erases all settings. The programming will have to be redone from the beginning.

With the engine

1. Press **5 times** on the push button, at **1 s** intervals.
2. At the **5th press**, hold for **3 s**.
3. Two pulses confirm the reset.

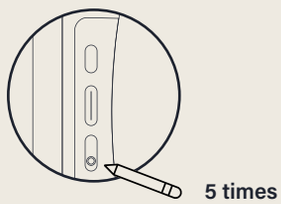

With the remote control

1. Hold **STOP 5 s**.
2. After the engine pulse, hold the rear button of the remote control **7 s**.
3. Two pulses confirm the reset.

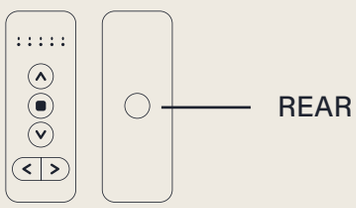

SUMMARY

For a first installation:

1. Activate motor 1 s
2. Pair the motor with the remote control
3. Check the UP / DOWN direction
4. Program the lower limit
5. Program the upper limit
6. Add intermediate positions as needed

Important : when installing multiple blinds, program only one motor at a time to avoid any interference.